

# INDEX

- AC switchboard
  - front panel, 4-3
  - specifications, 4-1 through 4-2
  - troubleshooting charts, 4-6 through 4-11
- Air circuit breaker troubleshooting chart, 4-6 through 4-7
- Air compressor, 2-4, 6-17 through 6-23, 8-13
  - functional description, 6-18
  - maintenance, 6-19
  - operation, 6-18 through 6-19
  - preventive maintenance schedule, 6-19 through 6-20
  - on 60-ton crane, A-2
  - specifications, 6-17
  - troubleshooting chart, 6-20 through 6-23
- Air-conditioning system
  - functional description, 5-9
  - location, 2-17, 5-8 through 5-9
  - maintenance, 5-9 through 5-10
  - specifications, 5-8 through 5-9
  - troubleshooting chart, 5-10 through 5-13
- Ammeter panel, 2-15
- Anchoring procedures, 8-20 through 8-21
- Anchors
  - 770-pound, 8-21 through 8-22
  - stern, 8-22
  - 315-pound, 8-20 through 8-21
- Anchor windlass, 2-19 through 2-20
- Automatic shutdown and alarm system, 3-7
- Auxiliary diesel engine, 8-8
- Auxiliary generator, 8-11
  - control panels, 8-11 through 8-12
  - on 60-ton crane, A-3
- Auxiliary hoist, 2-8
  - block, 8-16
  - control, 2-12
  - machinery, 2-8
  - operating data, 2-16
- Axial fans
  - 400-CFM, 5-1 through 5-2
  - 3,000-CFM, 5-1 through 5-2
  - 2,000-CFM, 5-1 through 5-2
  - troubleshooting chart, 5-4 through 5-5
- Battery charger, 2-4, 6-5
  - functional description, 6-5, 6-6
  - operation, 6-7
  - specifications, 6-5
  - troubleshooting chart, 6-7 through 6-8
- Bell
  - signal, 2-10
  - warning, rotate, 2-10
- Bilge and ballast pump. *See* Pump, bilge and ballast
  - functional description, 6-9
  - maintenance, 6-10
  - on 60-ton crane, A-5
  - specifications, 6-8
  - troubleshooting chart, 6-10
- Blocks
  - auxiliary, 8-16
  - boom and hoist, 8-16 through 8-17
  - main hoist, 8-16
  - rigging of, 9-2
- Boatswain, 1-1
- Bolt torque values, 10-12
- Boom and hoist blocks, 8-16 through 8-17
- Boom cradle, 2-21
  - on 60-ton crane, A-5
- Boom hoist
  - control, 2-12 through 2-13
  - hoisting, 8-14
  - lowering, 8-15
  - machinery, 2-8 through 2-9
  - operating (luffing) data, 2-17
  - precautions, 8-14
- Cab controls, 8-14
- Cable dimensions, 9-4
- Capacitor, resistor, transformer, and fuse
  - troubleshooting chart, 4-11
- Capstans, 2-20
- Center steadiment, 2-10
  - on 60-ton crane, A-4
- CHT. *See* Collect, hold, and transfer system
- Circuit breakers, cleaning and inspection, 4-22

- Clinometer, A-9
- Closed loop control, generator and voltage regulator, 3-18
- Coils (AC switchboard) troubleshooting chart, 4-9
- Collect, hold, and transfer (CHT) system
  - functional description, 5-42 through 5-43
  - maintenance, 5-47 through 5-48
  - operation, 5-43 through 5-46
  - potential hazards and safety precautions, 5-47
  - pump and grinder troubleshooting chart, 5-48 through 5-49
  - room, 240-VAC power panel, 4-15
  - specifications, 5-41 through 5-42
- Collector, rotary, 2-10
- Components, engine, 3-2
- Connection box, shore power, 2-21
- Contacts (AC switchboard) troubleshooting chart, 4-7 through 4-9
- Container spreader bar, 2-21
- Control
  - auxiliary hoist, 2-12
  - boom hoist, 2-12
  - rotate, 2-13
- Controls, main hoist, 2-10
- Cooking range specifications, 5-22
- Cook, senior, 1-3
- Cradle, boom, 2-21
  - on 60-ton crane, A-5
- Crane controller, maintenance, 10-18 through 10-21
  - coils troubleshooting chart, 10-19
  - contact troubleshooting chart, 10-18 through 10-19
  - magnets and mechanical parts troubleshooting chart, 10-19 through 10-20
  - overload relay troubleshooting chart, 10-20 through 10-21
- Crane, floating
  - 100-ton, design, 2-1, 2-3
  - 100-ton, specifications, 2-2 through 2-3
  - 60-ton, design, A-1 through A-2
  - 60-ton, specifications, A-2
- Crane machinery house
  - 120-VAC power panel, 4-16
  - 240-VAC power panel, 4-15
- Crane master, 1-1
- Crane operation
  - 100-ton crane, 8-1 through 8-27
  - 60-ton crane, A-12 through A-13
- Damage control kit, D-1 through D-4
- DC motor, cleaning and inspection, 10-6
- DC-powered machinery
  - corrective maintenance, 10-16 through 10-32
  - inspections, tests, and adjustments, 10-3 through 10-5
  - lubrication chart, 10-15 through 10-16
  - preventive maintenance, 10-1 through 10-16
  - preventive maintenance action schedule, 10-2
- Deactivation of floating crane
  - final acceptance inspection, 8-25 through 8-26
  - for oversea tow, 8-25
  - for wet storage, 8-24
- Diesel engine
  - components, 3-2 through 3-5
  - functional description, 3-1 through 3-2
  - instruments and controls, 3-5
  - maintenance, 3-8 through 3-9
  - power generation, 8-8 through 8-10
  - on 60-ton crane, A-2
  - specifications, 3-1
- Disinfection procedures
  - potable water, 5-36
  - potable water pipes, 5-37
  - potable water tanks and systems, 5-37
- Distribution panels, 2-4
  - for CHT room, 240-VAC, 4-15
  - for crane machinery house, 120-VAC, 4-16
  - for crane machinery house, 240-VAC, 4-15
  - for engine room, 120-VAC, 4-17
  - for engine room, 120-VAC, center, 4-14
  - for engine room, 120-VAC, light distribution, 4-18
  - for engine room, 120-VAC, strip heater, 4-18

- Distribution panels (Continued)
  - for engine room, 240-VAC, center, 4-12 through 4-13
  - for galley, 240-VAC, 4-15
  - for galley and quarters, 120-VAC, 4-16
  - for galley and quarters, 120-VAC, lighting, 4-17
  - for operator's cab, 4-18
  - on 60-ton crane, A-2
- Docking plans, C-1 through C-4
- Drinking fountain
  - functional description, 5-25
  - maintenance, 5-26 through 5-27
  - troubleshooting chart, 5-27 through 5-29
- Drive, rotate, 2-9
- Drum limit switch, 10-3
- Duty assignments, 1-1
- Electric motor (DC) troubleshooting chart, 10-21 through 10-26
- Electric range
  - maintenance, 5-22 through 5-24
  - specifications, 5-22
  - troubleshooting chart, 5-24 through 5-25
- Emergency conditions, 8-7, 8-19 through 8-20
- Engine
  - alarm system, 2-10
  - components, 3-2
  - diesel auxiliary, 8-8
  - diesel, 2-cycle, 3-1
  - diesel, main, 8-8 through 8-9
- Engine room, 2-4 through 2-6
- Engineer
  - chief, 1-1
  - senior marine, 1-2
- Engineman, 1-2
- Engine room
  - 120-VAC-load center panel, 4-14
  - 120-VAC power panel data, 4-17
  - 240-VAC-load center power panel data, 4-12 through 4-13
- Environmental conditions, 8-19 through 8-20
- Equalizing bar, 8-4
- Equipment
  - electrical starting, 3-6
  - miscellaneous, 6-1
  - on 60-ton crane, A-9
- Exhaust smoke analysis, 3-10
- Fans, axial
  - 400-CFM, 5-1 through 5-2
  - 3,000-CFM, 5-1 through 5-2
  - 2,000-CFM, 5-1 through 5-2
- Fire-fighting system, 2-5
  - engine room, 7-3
  - fire-main system, 7-1 through 7-3
  - fire pump, 7-3 through 7-8
  - portable extinguishers, 7-3
  - on 60-ton crane, A-3
- Fire-main system, 2-21, 7-1 through 7-2
- Fire pump
  - operation, 7-4
  - specifications, 7-3
  - troubleshooting chart, 7-5 through 7-8
- Floodlights, 2-20
- Freshwater tanks on 60-ton crane, A-11
- Fuel tanks on 60-ton crane, A-10 through A-11
- Fuel oil transfer pump
  - functional description, 6-13 through 6-14
  - maintenance, 6-15
  - specifications, 6-13
  - troubleshooting chart, 6-15 through 6-17
- Galley, 240-VAC power panel, 4-15
- Galley and quarters, 120-VAC
  - lighting distribution box data, 4-17
  - power panel data, 4-16
- Galley equipment
  - drinking fountain, 5-25 through 5-29
  - electric range, 5-22 through 5-24
  - refrigerator, 5-29 through 5-35
- Generator
  - auxiliary, 8-11
  - breaker trip pushbutton, 2-15
  - control panel auxiliary, 8-11 through 8-12
  - control panel on 60-ton crane, A-6
  - main, 8-10 through 8-11
  - monthly inspection schedule, 4-4
  - panel, main, 8-12 through 8-13

- Generator (Continued)
  - reverse-current relay, 4-3
  - semiannual inspection schedule, 4-5
  - set, diesel engine, 3-1
  - specifications, 3-14
  - troubleshooting chart, 3-16 through 3-17
- Generator and voltage regulator, closed loop control, 3-18
- Generator switchboard
  - functional description, 4-3 through 4-4
  - monthly inspection schedule, 4-4 through 4-5
  - specifications, 4-1 through 4-3
  - troubleshooting charts, 4-6 through 4-11
- Governor
  - adjustments, 3-13
  - function description, 3-11
  - heat exchanger mounting, 3-11
  - sectional view, 3-12
  - specifications, 3-10 through 3-11
- Heat exchanger mounting (governor), 3-11
- Heating system
  - functional description, 5-6
  - maintenance, 5-7
  - specifications, 5-5
  - troubleshooting chart, 5-8
- Hoist
  - auxiliary, 2-8
  - boom, 2-8, 8-14 through 8-15
  - main, 2-7, 8-16
  - on 60-ton crane, A-3
- Hoist/rotate operation, 8-14
- Hook inspection, 10-15
- Horn, warning, 2-15
- Hot water system, 2-4, 5-13 through 5-21
  - functional description, 5-14 through 5-18
  - maintenance, 5-18 through 5-19
  - preoperational tests, 5-15 through 5-16
  - putting into operation, 5-17 through 5-18
  - specifications, 5-13 through 5-14
  - starting adjustments, 5-17
  - troubleshooting charts, 5-20 through 5-21
- House, machinery, 2-8
- Hydropneumatic tank, pressurizing, 5-38
- Instruments and controls, 3-5
  - on 60-ton crane, A-6
- Lifting power (rigging), 9-2
- Limit switches, 8-15
- Load,
  - lines, 9-2
  - test, 10-15
  - transport, 8-5
- Load hook, inspection for load test, 10-15
- Load hooks, use of
  - on 100-ton crane, 8-2 through 8-3
  - on 60-ton crane, A-12
  - Lube oil filter, 2-4, 6-11
  - functional description, 6-12
  - maintenance, 6-12 through 6-13
  - specifications, 6-11
- Lubricating oil tank on 60-ton crane, A-11
- Lubrication
  - chart, 10-15 through 10-16
  - and preventive maintenance, 3-8 through 3-9
- Machinery house
  - on 100-ton crane, 2-7 through 2-10
  - on 60-ton crane, A-2 through A-4
- Magnetic brake troubleshooting chart, 10-27
- Main hoist
  - block, 8-16
  - controls, 2-10 through 2-12
  - hoisting, 8-16
  - lowering, 8-16
  - machinery, 2-7 through 2-8
  - precautions, 8-16
- Main hoist operating data, 2-16 through 2-17
- Maintenance, DC-powered machinery, 10-1 through 10-32
- Moorage, 8-22 through 8-23
  - and security, 8-20
- Motor controller, 4-18 through 4-25
  - coil troubleshooting chart, 4-23
  - contact troubleshooting chart, 4-22 through 4-23
  - magnetic and mechanical parts troubleshooting chart, 4-24
  - manual starter troubleshooting chart, 4-25
  - specifications, 4-20
  - overload relay troubleshooting chart, 4-24
- NCO, watercraft, 1-1

- Oil-water separator discharge system, 2-23
- Operating data
  - auxiliary hoist, 2-16
  - boom hoist (luffing), 2-17
  - main hoist, 2-16
- Operator, crane, 1-2
  - assistant, 1-2
- Operator's cab, 2-10 through 2-12
  - controls, 8-14
  - on 60-ton crane, A-4, A-8 through A-9
- Oversea tow, 8-25
- Panels
  - ammeter, 2-15
  - engine control system, 3-6
  - engine instrument, 3-5
  - voltage control, 3-6
- pillow block bearing troubleshooting chart, 10-31 through 10-32
- Potable water system
  - disinfection procedures, 5-36 through 5-37
  - functional description, 5-36
  - maintenance, 5-39
  - operation, 5-37 through 5-39
  - troubleshooting charts, 5-40 through 5-41
- Power generation
  - air compressor, 8-13
  - auxiliary diesel engine, 8-8
  - auxiliary generator, 8-11
  - generator control panels, 8-11 through 8-13
  - main diesel engines, 8-8 through 8-10
  - main generator, 8-10 through 8-11
  - operator's cab, 8-7
  - on 60-ton crane, A-2
- Power panel cleaning and inspecting, 4-21
- Power plant
  - on 100-ton crane, 2-4
  - on 60-ton crane, A-2
- Power plant (AC) distribution system, 4-1
- Preamplifier, voltage regulator, 3-25 through 3-26
- Preoperational inspection of crane, 8-1 through 8-2
- Pumps, 2-4
  - bilge and ballast, 2-22, 6-8
  - fuel oil transfer, 6-13
- Pumps (Continued)
  - raw water, 6-1 through 6-5
  - recirculating motor troubleshooting chart, 5-21
  - sewage discharge, 2-22
  - on 60-ton crane, A-2
- Quarters, crew's, 2-6 through 2-7
- Radio set, 2-17
  - operating, 2-18
  - operating channels, B-1 through B-3
- Radius indicator, 2-15, A-9
- Raw water pump
  - functional description, 6-1 through 6-2
  - maintenance, 6-2 through 6-3
  - specifications, 6-1
  - troubleshooting chart, 6-3 through 6-5
- Reactivation of floating crane, 8-26 through 8-27
- Rectifier, silicon, 3-23
- Reeving
  - blocks, 9-4 through 9-5
  - methods, 9-4 through 9-7
- Refrigerator
  - maintenance, 5-30 through 5-31
  - operation, 5-30
  - specifications, 5-29
  - troubleshooting chart, 5-32 through 5-35
- Regulator, voltage and resistance measurements, 3-24
- Repairer, power generator equipment, 1-2
- Resistance measurements, insulation, 10-7 through 10-9
- Rigger, 1-3
- Rigging, 9-1 through 9-3
  - blocks, 9-2
  - lifting power, 9-2
  - load lines, 9-2
  - wire rope, 9-2 through 9-3
- Rotate and hoist control, 2-13 through 2-14, 8-3
  - heavy lifts, 8-3
  - load swings, 8-3
  - multiple lifting maneuvers, 8-5
- Rotate machinery, 2-9 through 2-10, 8-17
  - on 60-ton crane, A-3

- Rotation
  - during load handling, 2-13
  - methods of stopping, 2-13
- Safety, 1-6, 5-47, 8-5, 8-7
- Salvage work, 8-5
- Seaman, 1-3
- Security, 8-23 through 8-24
- Sewage discharge pump, 2-22
- Sewage system. *See* Collect, hold, and transfer (CHT) system
- Shore power connection box, 2-21
- Shunt, magnet, and other mechanical parts troubleshooting chart, 4-10
- Signals, 1-3
  - hand, 1-4 through 1-5
  - types of, 1-4
- Signalman, 1-3
- Silicon transistor, 3-23
- Space heater
  - installation, 5-5
  - troubleshooting chart, 5-8
- Speed reducer, 10-27 through 10-31
  - troubleshooting chart, 10-28 through 10-31
- Spreader bar, container, 2-21
- Steadiment, center, 2-10
- Stem anchor, 8-22
- Stove. *See* Electric range
- Stress gage, 8-3 through 8-4, A-13
- Structure, rotating, stability of, 2-14
- Switches, emergency fire control, 2-21
- System
  - automatic shutdown and alarm, 3-7
  - collect, hold, and transfer (CHT), 5-41
  - engine alarm, 2-10
  - fire-fighting, 2-5, 7-1, A-3
  - fire-main, 7-1 through 7-2
  - hot water supply, 5-13
  - water, potable, 5-36
- Test
  - transistor, 3-23
  - zener diode, 3-23
- Transformer, saturable, 3-26
- Transistor
  - silicon, diagrams, 3-23
  - test, 3-23
- Trolley, 3- to 6-ton hoist, 2-10
- Troubleshooting charts
  - air circuit breakers, 4-6 through 4-7
  - air compressor, 6-20 through 6-23
  - air-conditioning units, 5-10 through 5-13
  - axial fans, 5-4 through 5-5
  - battery charger, 6-7 through 6-8
  - bilge and ballast pump motor, 6-10
  - capacitors, resistors, transformers, and fuses, 4-11
  - CHT system pumps and grinders, 5-48
  - coils (AC switchboard), 4-9
  - coils on crane controller, 10-19
  - coils on motor controller, 4-23
  - contacts (AC switchboard), 4-7 through 4-9
  - contacts on crane controller, 10-18 through 10-19
  - contacts on motor controller, 4-22 through 4-23
  - drinking fountain, 5-27 through 5-29
  - electric motor (DC), 10-21 through 10-26
  - electric range, 5-24 through 5-25
  - fire pump and motor, 7-5 through 7-8
  - fuel oil transfer pump and motor, 6-15 through 6-17
  - generator, 3-16 through 3-17
  - hot water system, 5-20 through 5-21
  - magnetic and mechanical parts on motor controller, 4-24
  - magnetic brake, 10-27
  - magnets and mechanical parts on crane controller, 10-19 through 10-20
  - manual starters on motor controllers, 4-25
  - overload relays on crane controller, 10-20 through 10-21
  - overload relays on motor controller, 4-24
  - pillow block bearing, 10-31 through 10-32
  - potable water pump and motor, 5-40 through 5-41
  - raw water pump assembly, 6-3 through 6-5
  - recirculating pump motor (hot water system), 5-21
  - refrigerator, 5-32 through 5-35
  - shunts, magnets, and other mechanical parts (AC switchboard), 4-10

Troubleshooting charts (Continued)

- space heater, 5-8
- speed reducer, 10-28 through 10-31
- voltage regulator, 3-19 through 3-21

Ventilating system

- functional description, 5-1 through 5-2
- maintenance, 5-2 through 5-5
- specifications, 5-1
- troubleshooting chart, 5-4 through 5-5

Voltage regulator

- component testing, 3-21
- mechanical assembly, 3-27
- preamplifier, mechanical assembly, 3-28
- and resistance measurements, 3-24
- specifications, 3-17
- troubleshooting chart, 3-19 through 3-21

Warping lines, 8-22

Water pipes, potable, 5-36

Water pump

- motor troubleshooting chart, 5-40 through 5-41
- (potable) troubleshooting chart, 5-40
- (raw) specifications, 6-1
- (raw) troubleshooting chart, 6-3 through 6-5

Water system, potable, 5-36

Water tank, 5-36

- level, establishing, 5-39

Winches on 60-ton crane, A-5

Windlass, anchor, 2-19

- on 60-ton crane, A-5

Wire rope

- maintenance, 9-8, 10-5 through 10-6
- measurement, 9-3, 10-6
- rigging, 9-2 through 9-3

Zener diode test, 3-23